


CHINON

REFLEX 358RZ ZOOM

INSTRUCTION MANUAL

TABLE OF CONTENTS

Nomenclature	1
SIMPLIFIED GUIDE (BASIC LEVEL):	
A. Battery Installation	3
B. Battery Check	3
C. Setting the Film Speed	4
D. Automatic Film Loading	5
E. Holding the Camera	6
F. Viewfinder Information	6
G. LCD Panel Display	6
H. Controlling the Image Size by Using the Zoom	7
I. Autofocus Shooting	8
J. Automatic Film Rewinding	10
K. Attaching the Hand Strap and the Lens Cap	11
APPLIED USE:	
A. Continuous Shooting	12
B. Auto Focus Modes	13
C. AF Lock (Prefocus) and Cancellation	14
D. Exposure Correction (backlight control)	15
E. Macro Photography	16
F. Multiple Exposures	17
G. Self-timer	19
H. Flash Photography	20
I. Filter and Hood	22
J. External Flash Unit	22
K. Tele Converter	24
L. Eyepiece Cover	24
M. Care of the Camera	25
Specifications	26

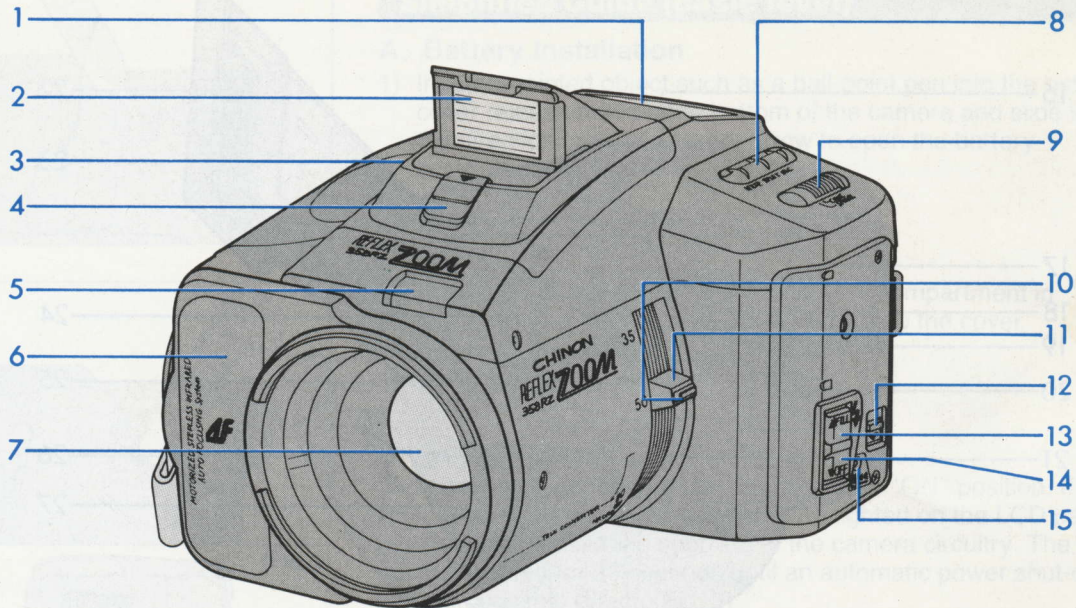

NOMENCLATURE

- | | | |
|-----------------------------|--|-------------------------------|
| 1. LCD indication | 6. Auto focus window | 11. Zoom lever |
| 2. Retractable Flash | 7. Lens | 12. Back cover release button |
| 3. Shutter release button | 8. BLC (Back Light Control) button/
Multiple exposure button/Self-time button | 13. FILL-FLASH switch |
| 4. Main switch | 9. Single/Continuous button | 14. OFF-FLASH switch |
| 5. Self-time indication LED | 10. Macro button | 15. Manual rewind switch |



This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer
I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.


It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

PayPal Name Lynn@butkus.org

Venmo @mike-butkus-camera Ph. 2083

www.PayPal.me/lynnbutkus

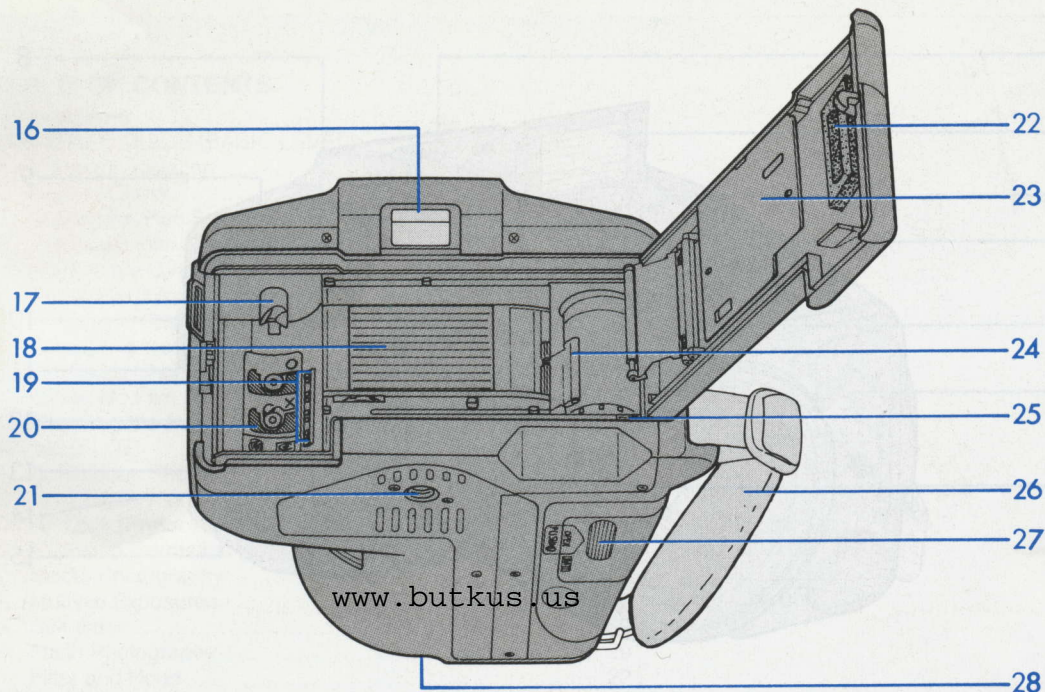

- 16. Viewfinder eyepiece
- 17. Film rewind shaft
- 18. Quick return mirror
- 19. Automatic film speed setting contacts
- 20. Film chamber
- 21. Tripod socket
- 22. Film window


- 23. Film pressure plate
- 24. Take-up spool
- 25. Film tip mark
- 26. Hand strap
- 27. Battery compartment cover
- 28. Tele converter/62 mm filter/lens hood bayonet adapter

www.butkus.us

Simplified Guide (basic level)


A. Battery Installation

- 1) Insert a pointed object such as a ball-point pen into the battery cover release hole on the bottom of the camera and slide it in the direction indicated by the arrow to open the battery compartment. (Fig. 1)

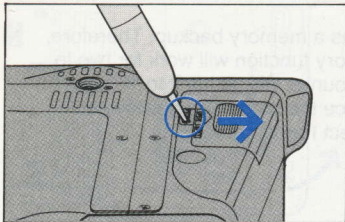

(Fig. 1)

- 2) Place the battery correctly in the battery compartment in accordance with the marks inside and close the cover.
 - * Use a 6 V lithium battery "2CR-5". (Fig. 2)

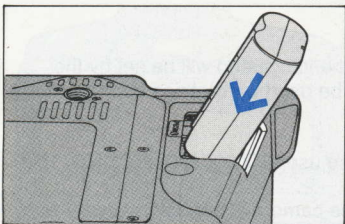


(Fig. 2)

B. Battery Check

Slide the flash-up button (main switch) to the "ON" position. If the film counter and battery check mark are lighted on the LCD panel at this time, power is being supplied to the camera circuitry. The marks will stay lighted for 30 seconds until an automatic power shut-off system goes into effect. (Fig. 3)

NOTE:

- * When either of the following occurs, it means that the battery condition is too low for continued use and should be replaced with a new one.
 - The battery check mark is blinking.
 - Nothing appears on the LCD panel.
- * Battery life: Approximately 36 24-exp rolls, using 50% flash (Chinon laboratory testing)

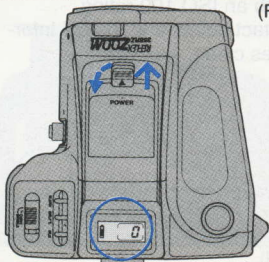

(Fig. 3)

(Memory Backup System)

This camera uses a condenser as a memory backup. Therefore, even without a battery, the memory function will work for two to three hours. After that, the film counter will go back to "0" even in the middle of a roll of film. Replace the battery as quickly as possible to avoid losing the correct frame number.


C. Setting the Film Speed

Films with DX coding. (Fig. 4)


If a film with DX coding is used, the film speed will be set by the camera automatically. Films can be used with ratings from ISO 50 to 1600.

NOTE:



- * For reversal (slide) film, please use ISO 50, 100, 200, 400, 1000 or 1600.
- * For film without DX coding, the camera is set automatically at ISO 100. Only use non-DX film with an ISO 100 rating.
- * Please keep the camera's DX contact points and the DX information panels on the film cartridges clean.

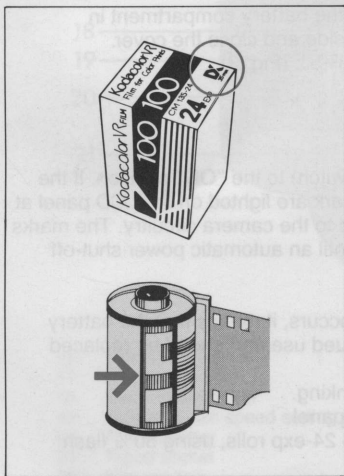

(Fig. 4)

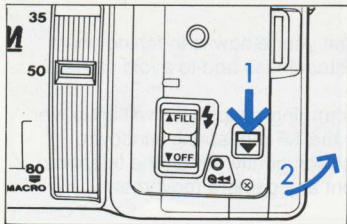

(Fig. 5)

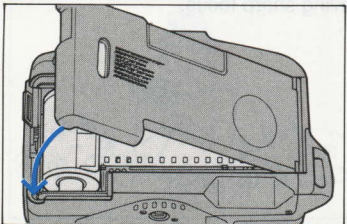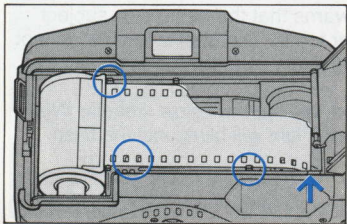

(Fig. 6)


D. Automatic Film Loading


The film should be loaded into the camera carefully, without being subjected to direct sunlight.

- 1) Open the back cover by pushing the back cover release button in the direction of the arrow. (Fig. 5)
- 2) Insert the film cartridge and pull out the film so that the trimmed end lines up with the film tip mark. Make sure that the film lies flat between the film guides.
- 3) Close the back cover. (Fig. 6)
The film will be advanced automatically until the counter on the LCD panel shows "1".



NOTE:

- * If the frame counter on the LCD panel is blinking "0" after the back cover has been closed, it means that the film has not been loaded correctly. Open up the back cover and insert the film again correctly.
- * The length of the film should not be too long or too short. If too much film was pulled out of the film cartridge, then rewind some of it back into the cassette so the end of the film reaches the film tip mark on the back of the camera.
- * When the back cover is opened, do not touch the inside of the mirror housing.

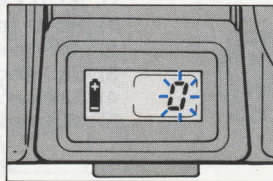

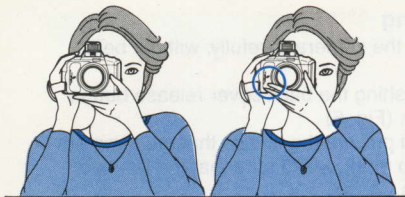

(Fig. 7)

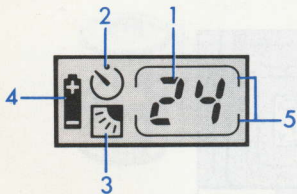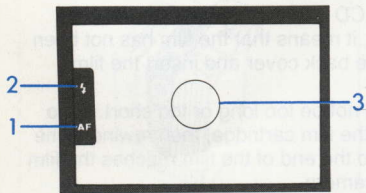

E. Holding the Camera

Hold the camera in such a way that your elbow is touching your body securely to ensure camera steadiness and to avoid camera shake. (Fig. 7)

Hold the camera so that fingers, carrying straps, etc. will not cover any part of the flash unit, lens, or the AF measuring windows. Press down the shutter release button gently. When the telephoto lens is in use, be careful to prevent any camera movement.

F. Viewfinder Information

1) AF OK signal.

When blinking, this indicator warns that the camera-to-subject distance is too close for proper focus. The 358RZ shutter cannot be released in the single mode if this condition occurs.

2) Flash Ready Signal

When the flash is fully charged, the light will glow steadily. While the flash is recharging, the same light will blink until the flash recharging is completed.

3) Autofocus Frame/Microprism

This area should be pointed directly at the picture's subject to assure pinpoint focusing accuracy. In the macro mode, the microprism will assist in achieving sharp focus.

G. LCD Panel Display


- 1) Frame counter
- 2) Self-timer
- 3) BLC (backlight control)
- 4) Battery check
- 5) Multiple exposure

H. Controlling the Image Size by Using the Zoom

* The through-the-lens reflex viewing of the 358RZ enables the image to be viewed exactly as it will result on the picture. Use the zoom lever to adjust the desired image size.

1) Telephotography


When a telephoto perspective is desired, move the zoom lever in the direction of the tele (80 mm) position. (Fig. 8)

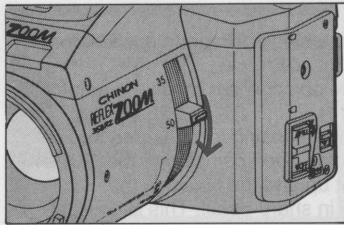

(Fig. 8)


2) Wide Angle Photography

When a wide angle or panoramic view is required, move the zoom lever in the direction of the wide angle (35 mm) position. (Fig. 9)

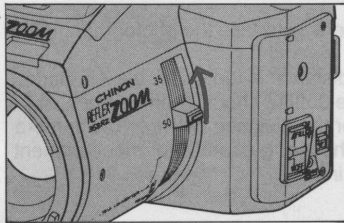

(Fig. 9)




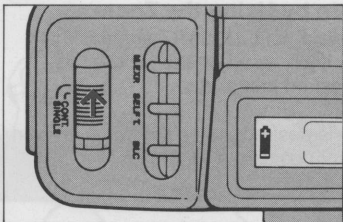

(Fig. 10)



(Fig. 11)

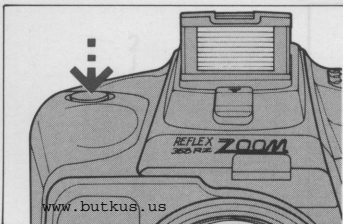

www.butkus.us

I. Autofocus Shooting


- 1) Place the AF mode button to the single AF mode position for most forms of photography. (Fig. 10)
- 2) Position the camera so that the object is set within the autofocus frame of the viewfinder. (Fig. 11)
- 3) Press the release button gently. Focusing is measured and set automatically. Once the focus has been completed, the "AF OK" mark in the viewfinder will light up and the object in the autofocus frame will be visible in sharp detail. This is a visual confirmation that the subject will be correctly focused on the picture.

Press the shutter button all the way to take the photograph. (Fig. 12)

When the camera-to-subject distance is too close, the AF mark in the viewfinder will blink. The 358RZ should then be manually shifted into the macro mode or the distance between the camera and the subject must be lengthened. (Accurate AF measurement is from 0.85 meters (33.5") to infinity.)



(Fig. 12)

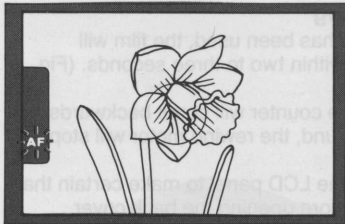

(Fig. 13)


When using the single AF mode, the shutter cannot be released until the lens has been properly focused. (Fig. 13)

The following conditions or subjects may not be properly focused.


NOTE:

* For proper focusing, make sure that the subject completely fill the entire area of the viewfinder focusing zone. When focusing on a subject that cannot fill the entire area of the viewfinder focusing zone, position the subject at the lower right corner of the focusing zone. This is the area in which the infrared ray is most precisely controlled.

Water surface, car bodies, glass and similar objects which easily reflect light. Also, objects viewed through glass windows or wire netting, etc.

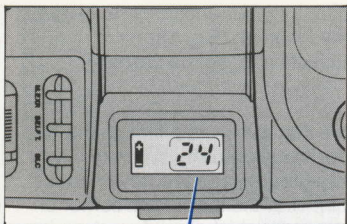


(Fig. 14)

 

J. Automatic Film Rewinding

- 1) When the entire film cassette has been used, the film will automatically start to rewind within two to three seconds. (Fig. 14)
- 2) While the film is rewinding, the counter will count backwards. When the film is entirely rewound, the rewind motor will stop automatically.
- 3) Check the frame counter on the LCD panel to make certain that the film counter shows "0" before opening the back cover.

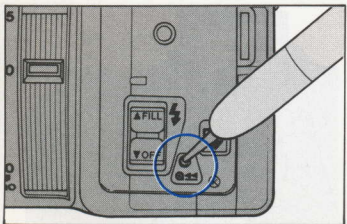

(Fig. 15)

(Rewinding a partially exposed roll of film)


If a film must be removed before it has been completely used, press the manual rewind button located next to the back cover release button on the side of the camera. Use a ball-point pen or a similar object which is not too sharp. Rewinding will begin automatically. (Fig. 15)

NOTE:


- * After the film is rewound, if the frame counter still does not return to "0", but the frame number is blinking, press the manual rewind button again.

K. Attaching the Hand Strap and the Lens Cap


The hand strap and the lens cap can be attached to the camera as shown in the diagram. (Fig. 16)

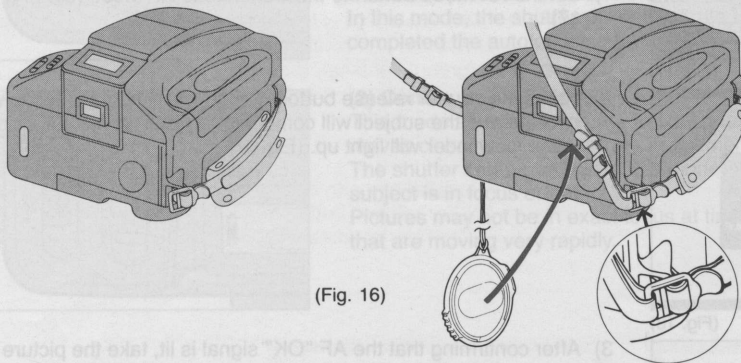


(Fig. 16)

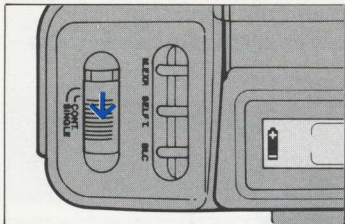

(Fig. 17)

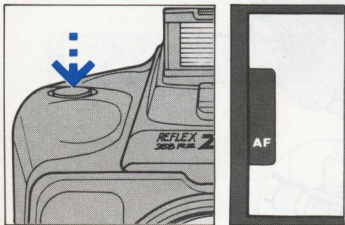

(Fig. 18)

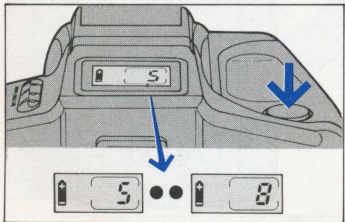


(Fig. 19)

Applied Use

A. Continuous Shooting

It is possible to take a maximum of three continuous pictures if the camera is in the continuous AF mode (cont) and the shutter release is kept fully depressed.


- 1) Set the AF mode button to the Continuous AF Mode (cont). (Fig. 17)
- 2) Press the shutter release button gently. The automatic focus will operate and the subject will come into focus. The AF "OK" signal in the viewfinder will light up. (Fig. 18)
- 3) After confirming that the AF "OK" signal is lit, take the picture by pressing the shutter release button all the way down.
- 4) Keep continued pressure on the shutter release button. When three frames have been exposed, the camera's film advance will automatically stop. (Fig. 19)

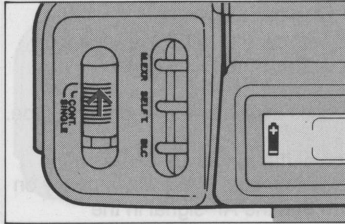

B. Auto Focus Modes

(1) Single AF Mode(s)


This setting is ideal for general picture taking as it incorporates a built-in focus lock and subject too close warning. When the shutter release button is gently pressed, the autofocus system operates and the subject comes sharply into focus. Sustained pressure on the release button will maintain a focus lock. In this mode, the shutter will not operate until the camera has completed the autofocusing procedure.

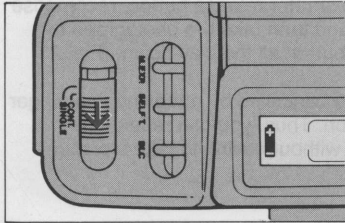


(2) Continuous AF Mode

This mode allows the camera to continually refocus as the subject moves closer to or further from the camera. The shutter can be tripped in this mode regardless whether the subject is in focus or not. Pictures may not be in exact focus at times, especially for subjects that are moving very rapidly.




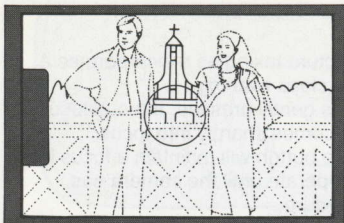


(Fig. 20)

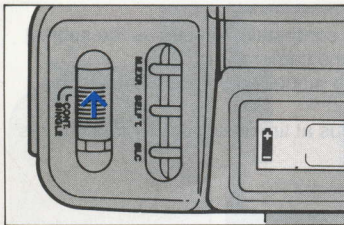

(Fig. 21)

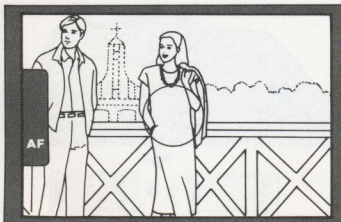

(Fig. 22)

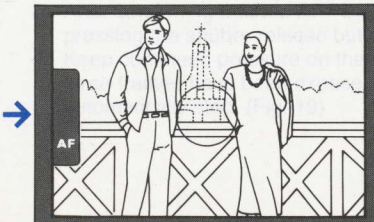

(Fig. 23)


C. AF Lock (Prefocus) and Cancellation

When the main subject is located “off-center” in the viewfinder, or when it is difficult to focus on the subject, the focus lock is invaluable. (Fig. 20)

- 1) Set the single/continuous advance switch to the single AF mode. (Fig. 21)
- 2) Look into the viewfinder and point the autofocus frame on the center of the subject that is to be in focus. Press down gently on the shutter release and confirm that the AF signal in the viewfinder (green) lights up. (Fig. 22)
- 3) Without losing tension on the shutter release button, recompose the picture in the viewfinder and then take the photograph by pressing the shutter release button all the way down. (Fig. 23)

NOTE:

- * The photo lock feature can be cancelled by removing your finger from the shutter release button. Thus, you can repeat this technique a number of times without having to take a picture.

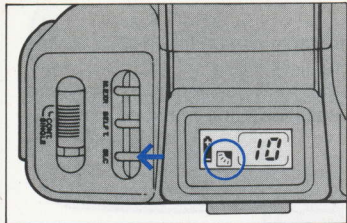

(Fig. 24)


D. Exposure Correction (backlight control)


When the main subject has less light falling upon it than the surrounding area, the subject may be underexposed or silhouetted. The backlight control compensates for the light imbalance and enables the subject to be more favorably exposed.

When the backlight control (BLC) button is pressed, the BLC indicator will appear in the LCD panel. When the shutter release button is depressed the exposure will be corrected automatically. (Fig. 24)


NOTE:

- * The exposure correction will be cancelled automatically after the picture has been taken. The backlight compensation can be cancelled without taking a picture by either pressing the backlight control button again or by closing the main power switch.
- * When taking a photograph at close distances, it is recommended that the daylight flash sync function be activated.

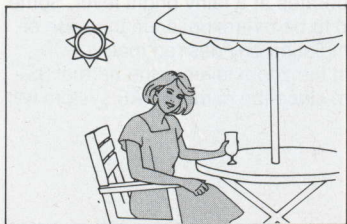

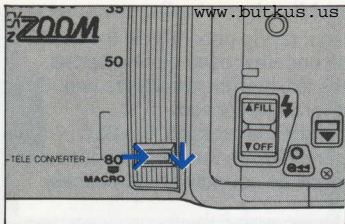

(Fig. 25)

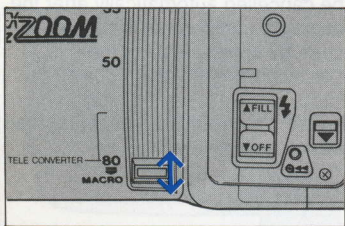

(Fig. 26)



E. Macro Photography

Fascinating macro close-ups of subjects can be taken at distances between 50 to 85 cm (19.5" to 33.2").


1) Set the zoom lever to the tele (80 mm) position. After pressing the shift button, rotate the zoom lever to the macro focusing area. (Fig. 25)

2) The lens must be manually focused. The camera's autofocus system is inactive when the lens system is shifted into macro. Ensure that the camera-to-subject distance is within the macro parameter and then focus by using the zoom lever to achieve sharp focus. (Fig. 26)


3) Press the shutter release button all the way down to take a picture.

Move the position of the camera backward and forward as needed to assist in focusing the subject.


The camera's flash system operates at a fairly bright level. Some light colored objects may tend to be overexposed in the case of macro photography. After completing any desired macro photography, be sure to return the zoom lever to the normal 35–80 mm picture taking position, since the camera's AF system will not function in macro.

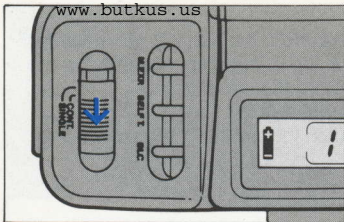

(Fig. 29)

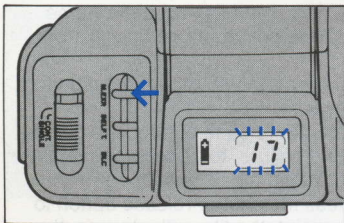

(Fig. 30)

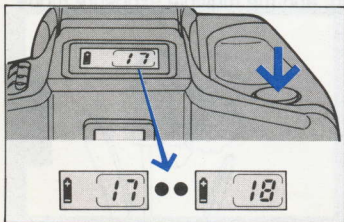

(Fig. 31)

Multiple Exposures (Three) in Continuous Mode

- 1) Set the Single/Continuous Switch to the CONT. position. (Fig. 29)
- 2) Press the multiple exposure button. When the counter frame on the LCD panel starts to blink, the multiple exposure mode is activated. (Fig. 30)
- 3) After composition has been determined, press and hold the shutter release button and take the photograph. (Fig. 31)

NOTE:

*1 Reversal (slide) film is not recommended for use with the multiple exposure feature.

Prior to developing and printing the film, the photofinisher should be advised that multiple exposures have been taken. Otherwise, the negatives may not be printed, or printed improperly.


The multiple exposure technique is suitable for capturing fireworks displays or night scenes, or when using the flash in a dark area. In daylight, it may result in overexposed negatives.

*2 Single and Continuous Multiple Exposure Modes

The multiple exposure mode will remain in effect after the first shot has been taken, even if the main switch has been set to "OFF". The next picture will be super-imposed on the first picture because the film will have not advanced.

*3 Continuous Multiple Exposure Mode

In this mode, the camera can also take two shots in rapid succession, followed by a third at some later time. The multiple exposure mode will be cancelled after the third and final picture has been taken.

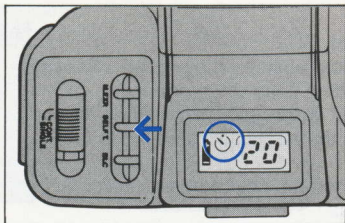

G. Self-timer

The 358RZ has a built-in electronic self-timer. It enables everyone to get into the picture and also helps to avoid camera shake in slow shutter speed situations, provided the camera is placed on a tripod or other firm surface.

- 1) Compose the picture using the reflex viewfinder.
- 2) Press the self-timer button. The self-timer marking will appear on the LCD display panel as confirmation that the self-timer mode has been activated.
- 3) Press the shutter release button. The picture will be taken about ten seconds after the self-timer indication on the front of the camera lights up. The LED will start blinking about three seconds before the shutter is released to provide an advance warning of the shutter release.


(Self-timer Cancellation)

The self-timer can be cancelled by pressing the self-timer button again or by setting the main switch to "OFF".

The self-timer will be cancelled automatically if the shutter release is not pushed within 30 seconds of originally activating the self-timer system.

During self-timer operation, the sensor flash will be activated exactly as during normal use. Please consult the automatic sensor flash mode, off flash mode, and fill in flash mode sections of this booklet for other techniques.



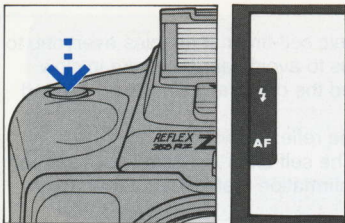

(Fig. 32)



H. Flash Photography (Automatic Sensor Flash Mode)

The Chinon 358RZ is designed to measure ambient light intensity and then activate and fire the built-in flash when needed.

If the “⚡” mark in the viewfinder lights up or blinks when the release button is pressed gently, the automatic flash mode is in operation. (Fig. 32)

The “⚡” flash mark will light when the shutter release is depressed in the following cases:


- 1) When the mark glows constantly, the flash is fully charged and the subsequently exposed picture will be exposed by electronic flash.
- 2) When it is blinking, the flash is in the midst of charging.

NOTE:


In the single shot mode, the shutter cannot be released. In the continuous mode, pictures can be taken prior to the flash being fully recycled.

(Effective Flash Distance)

ISO	35 mm	80 mm
100	0.85~ 4.2 m	0.5~ 2.7 m
400	0.85~ 8.3 m	0.5~ 5.1 m

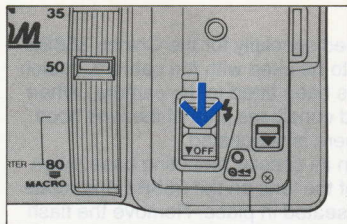

(Fig. 33)

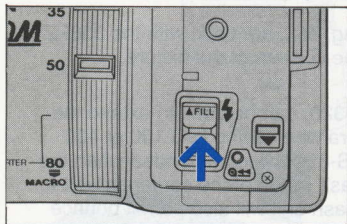

(Fig. 34)

(Off-Flash Mode)


Although the 358RZ fires the flash automatically in accordance with the brightness of the surrounding lighting conditions, there are times when it might be preferable to take a picture without flash to capture a special mood. Slide the flash mode switch downward and release the shutter release button while keeping the switch in that position. The flash unit will not fire and the resulting image will be exposed with available light only. When this mode is utilized, the flash symbol will not be illuminated in the viewfinder (Fig. 33)

(Fill-in Flash Mode <daylight sync>)

Under some available light conditions (deep shade or backlit situations) a picture may result where the subject is too dark. The use of the flash for daylight flash fill will enhance the picture tremendously under these conditions. Fill flash is achieved by sliding and holding the "flash mode switch" upward and then pressing the shutter release button. The flash symbol in the viewfinder will light as a confirmation that the daylight flash system has been activated. (Fig. 34)

NOTE:

When using flash-off or fill-in flash, shutter speed may be as slow as 1/4 sec. (Slow Shutter Program), use of a tripod is recommended in low light situations.

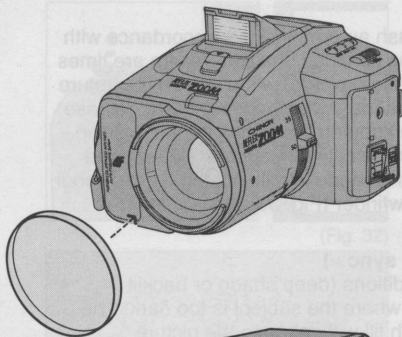

I. Filter and Hood

Use the filter ring which is designed specially for the Chinon 358RZ camera. It enables 62 mm filters to be used with the camera. Attach the filter after the adapter ring has been fitted to the camera. When taking photographs in backlighted conditions, use of the lens hood exclusively designed for this camera is suggested.

The lens hood has two flanges on its circular mounting base. Align these horizontally with the front of the lens on the 358RZ and rotate clockwise until the hood is firmly seated in place. Remove the flash for flash photography to assure full frame flash coverage.

NOTE:


When filters such as multi-imaging, etc., are used with the 358RZ, slight vignetting may appear in the corners of the picture.

J. External Flash Unit

The external flash unit (Auto GS-320) can be used to extend the effective flash range of the camera when using ISO 100 or 400 negative films. Using the Auto GS-320 is recommended when the subject is beyond the effective flash range of the camera's built-in sensor flash. The Auto GS-320 flash unit will also permit bounce flash photography.

How to operate:

- 1) Attach the Auto GS-320 to the camera and turn the slave switch on the flash to "ON".
- 2) For ISO 100 negative film, select the automatic position of A1 (A2 for ISO 400 negative film). Set the zoom head of the flash according to the following table and the picture can be taken.

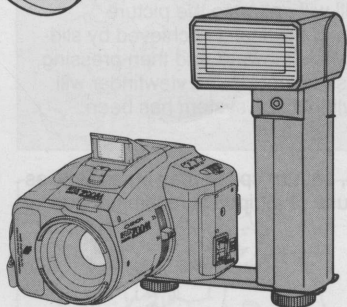

Lens focal length

- 35 mm
- 50 mm
- 80 mm
- 105 mm

(w/Tele Converter)

Flash zoom head position


- 28 mm position
- 50 mm position
- 50 mm position
- 105 mm position

Effective flash range ISO 100 negative film

- 35 mm (0.85–7 m; 2.8'–23')
- 50 mm (0.85–7 m; 2.8'–23')
- 80 mm (0.85–5 m; 2.8'–16.4')

ISO 400 negative film

- (0.85–13 m; 2.8'–43')
- (0.85–13 m; 2.8'–43')
- (0.85–10 m; 2.8'–33')

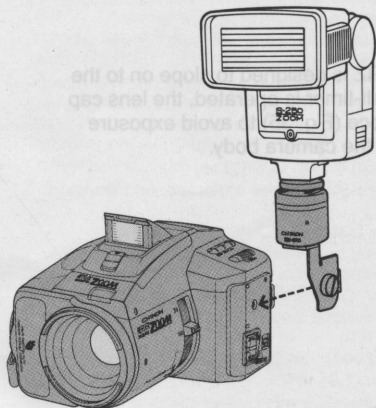


Using the optional slave unit (SE-520)

With the optional slave unit (SE-520), a hot shoe type automatic flash unit having an F number setting can be used as an external flash unit with the Chinon 358RZ. The effective flash range can be calculated with the following formula.

Effective range = Guide number ÷ F

F = 4.1 and 6.4 for 35 mm and 80 mm zoom lens settings respectively.


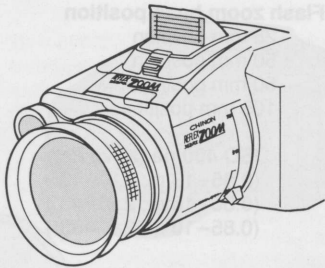


K. Tele Converter

Chinon offers an optional tele converter for the Chinon 358RZ which will extend the focal length of the telephoto distance to 105 mm. For its operation, the instruction booklet of the tele converter should be referenced.

L. Eyepiece Cover

The lens cap of the Chinon 358RZ is designed to slope on to the camera's eyepiece. When the self-timer is operated, the lens cap should be attached to the eyepiece (Fig. 35) to avoid exposure errors due to stray light entering the camera body.

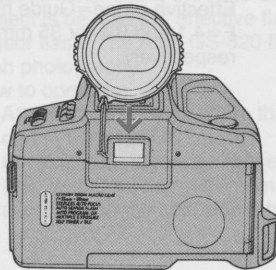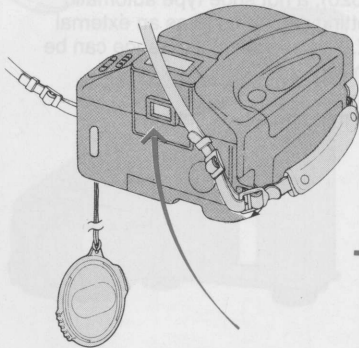

(Fig. 35)

M. Care of the Camera

The Chinon 358RZ is a precision photographic instrument. When used with care it will provide years of trouble-free service. Protect your camera from dirt, rain, dampness and excessive heat. Avoid touching the lens. To clean the lens, wipe it gently with a soft lintless cloth or tissue. Do not use eyeglass tissues as they might damage the lens coating. Do not open and touch the inside of the camera as possible high voltage in the flash circuitry can be dangerous. When the camera will not be in use for a long period of time, turn off the main switch and store in a well ventilated, cool, dry place.

SPECIFICATIONS

Type: Motorized fully automatic 35 mm AF lens shutter compact camera with Single Lens Reflex viewing system with built-in sensor flash and LCD indications.

Type of film: 35 mm film cartridge.

Film format: 24×36 mm

Lens system: CHINON all glass 35–80 mm F/4.1–6.4 lens with Macro; 8 elements in 7 groups.

Macro: Built-in. (Tele macro type)

Viewfinder: Fixed pentaprism type.

Focusing screen: Matte screen with micro prism.

VF Magnification: 0.8× (50 mm at infinity).

VF coverage: 85% in horizontal and vertical.

Dioptric factor: –1.0 diopter.

VF indications: Flash symbol LED for flash charging and flash firing, AF LED for AF OK and near distance warning.

Finder mirror: Motorized quick return mirror.

Auto focusing: Motorized infrared active servo AF system. Stepless.

Focus lock: Possible with shutter release button. Cancellable.

AF range: 0.85 m (33.5")—Infinity (stepless).

Macro range: 0.5 m (19.7")–0.85 m (33.5") in manual focusing.

AF mode: Continuous AF for continuous shooting and Single AF for single shooting mode.

Shutter: Motorized electromagnet program shutter.

Shutter speed: 1/4 sec.–1/300 sec.

Shutter release: Focus priority shutter release for single frame shooting and action priority shutter release for continuous shooting mode.

Exposure: Normal program AE and Slow shutter program AE (for Flash kill or Daylight sync mode).

Metering: TTL average metering

Photocell: S.P.D.

EV range: (Normal program) Wide: EV9.5–EV17 (ISO 100)

Tele: EV10.8–EV18.3 (ISO 100). (Slow shutter program)

Wide: EV6–EV17 (ISO 100) Tele: EV7.3–EV18.3 (ISO 100).

ISO speed: DX automatic setting for ISO 50, 100, 200, 400, 1000 and 1600. Automatic ISO 100 setting for non-DX films.

BLC: Built-in for +1.5 EV.

Film loading: Automatically loads film and advances to start position when the camera back is closed.

Film advance: Automatic power winder for single and 3 frame sequences at approx. 1 fps.

Film rewinding: Motorized fully automatic film rewinding system with auto rewind start at the end of the film and auto rewind stop upon rewind completion. Midroll rewinding of film is possible.

Film counter: Built-in with LCD panel.

Multiple exposure: Up to three exposure, on 1 frame is possible.

Shooting mode: Single frame shooting mode and continuous shooting frame sequences at approx. of 1 fps.

Flash system: Flashmatic sensor flash system.

Auto recharging: Commences immediately after the flash has been fired. 3 second recycle time.

G. No.: 12 (ISO 100)

Flash range (ISO 100): Wide: 0.85–4.0 m (2.8'–13.1') Tele: Macro: 0.5–2.7 m (1.6'–8.9')

Daylight sync.: Possible with built-in switch.

Flash override: Possible with built-in switch.

Power source: 6 V lithium battery 2CR5.

Battery check: Built-in with LCD indication. The shutter locks at low battery voltage.

Film type window: Built-in.

Tripod screw: Built-in.

Self-timer: Electronically controlled Self-timer with 10 seconds delay. Cancellable.

LCD indications: Frame counter/Film transport signal indicator, Picture taking mode indicator, Self-timer indicator, BLC indicator, Multiple Exposure indicator and Battery check.

External strobe: Attachable with optional slave unit.

Strap: Hand or neck strap attachable.

Filter: Attachable with filter attachment ring.

Hood: Attachable.

Auto shut off: 30 seconds.

Accessories: 105 mm teleconverter for extreme telephoto use, Slave unit, Dedicated flashes with built-in slave unit, Neck strap, lens hood.

Dimension: 121(L)×87(H)×119(W) mm (4.7×3.4×4.6")

Weight: 745 g (26 ounces).